



Courbes de charges Lastkurven Load diagrams Curvas de cargas

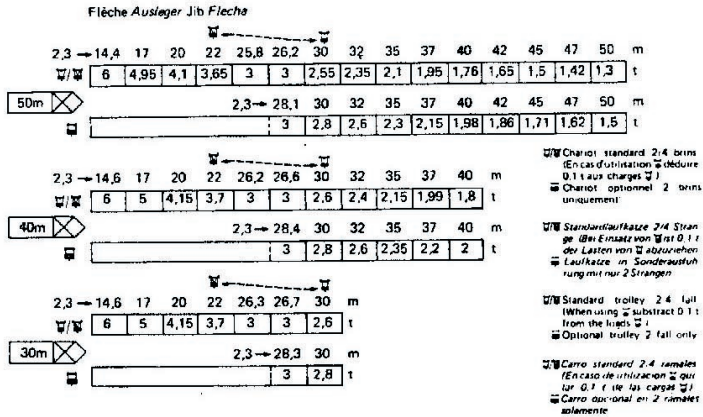

**Télescopage sur dalles - Ketterkrane im Gebäude
Climbing crane - Telescopage gruas trepadoras**

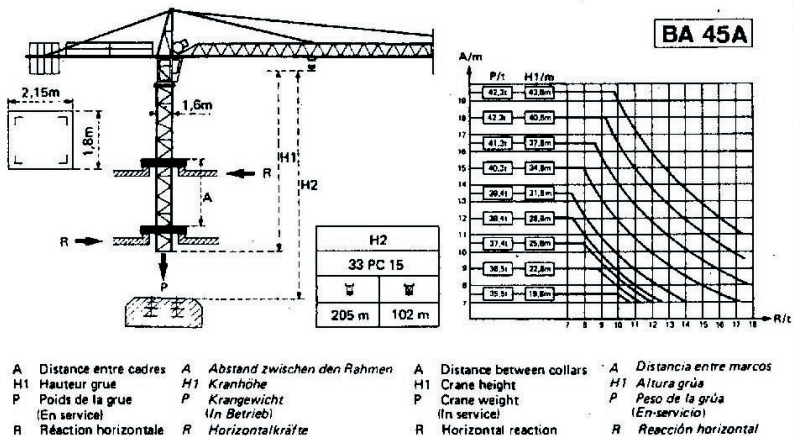

- En service
- Hors service
- In Betrieb
- Ausser Betrieb
- ☐ A vide sans lest avec flèche et hauteur maximum.
- ☐ Ohne Last und Ballast mit Maximalausleger und Maximalhöhe.
- In service
- Out of service
- ☐ Without load and ballast with longest jib and maximum height.
- En servicio
- Fuera de servicio
- ☐ Sin cargas, sin lastre con flecha y altura máxima.